



GIGA 5 – Quick Reference Guide



The 'GIGA 5 Instructions for Use' together with these short instructions 'GIGA 5 – Quick Reference Guide' has been awarded the seal of approval by the independent German Technical Inspection Agency, TÜV SÜD, due to its easy-to-understand style, its thoroughness and coverage of safety aspects.

GIGA 5 – Quick Reference Guide



These short instructions do not replace the ‘GIGA 5 Instructions for Use’. Make sure you read and observe the safety information and warnings first in order to avoid hazards.

Rinsing the coffee system

You can perform coffee system rinsing at any time.



Precondition: ‘Please select product:’ is displayed.

- ▶ Place a receptacle under the dual spout.
- P** ▶ Press the P button.
‘Maintenance status (1/5)’
- ▶ Press the ‘Rinse the coffee system’ button.
‘Machine is rinsing.’, water flows out of the dual spout.
The rinse stops automatically. ‘Please select product:’ appears on the display.

Rinsing the milk system

Depending on the setting in programming mode, the GIGA prompts you to rinse the milk system or automatically performs rinsing following milk preparation.

Example: Proceed as follows to rinse the milk system when prompted to do so.

Precondition: ‘Rinse the milk system.’ and the ☼ symbol are displayed.



- ▶ Place a receptacle under the dual spout.
- P** ▶ Press the P button.
‘Maintenance status (1/5)’
- ▶ Press the ‘Rinse the milk system’ button.
‘Milk system is being rinsed.’, water flows out of the dual spout.
The rinse stops automatically. ‘Please select product:’ appears on the display.

Cleaning the milk system

To ensure that the milk system in the dual spout always works properly, you must clean it **daily** when you have been preparing milk. The GIGA will **not** prompt you to clean the milk system.

CAUTION

If the wrong cleaning agent is used, the machine could be damaged and/or traces could be left behind in the water.

- ▶ Use only original JURA maintenance products.

i JURA Cappuccino Cleaner is available from specialised dealers.

Precondition: 'Please select product:' is displayed.

P

- ▶ Press the P button.

'Maintenance status (1/5)'

- ▶ Press the 'Clean the milk system' button.
- ▶ Press the 'Start' button.
- ▶ Press the 'Start' button again.

'Cleaning agent for milk system.'

- ▶ Pour 250 ml of fresh water into a receptacle and add one capful (max. 15 ml) of Cappuccino Cleaner.
- ▶ Immerse the milk pipe in the receptacle.
- ▶ Place another receptacle under the dual spout.
- ▶ Press the 'Next' button.

'Milk system is being cleaned.', water flows out of the dual spout.

'Water for cleaning milk system.'

- ▶ Rinse the receptacle thoroughly, fill it with 250 ml of fresh water and immerse the milk pipe in the water.
- ▶ Empty the other receptacle and place it under the dual spout again.
- ▶ Press the 'Next' button.

'Milk system is being cleaned.', the dual spout and the pipe are rinsed with fresh water.

The operation stops automatically. 'Milk system cleaning complete.' appears briefly on the display.


'Please select product:'



Dismantling and rinsing the dual spout

The dual spout must be dismantled and rinsed **daily** if milk has been prepared to make sure it functions perfectly and also in the interests of hygiene.


- ▶ Remove the milk pipe and rinse it thoroughly under running water.

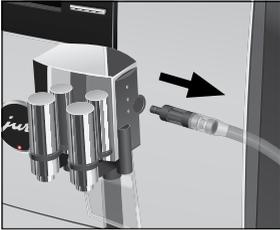


- ▶ Press the releasing devices and pull the cover of the dual spout up and off.




- ▶ Carefully pull the bottom part of the milk system down and off.





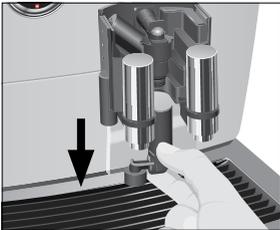


- ▶ Remove the milk system from the dual spout.

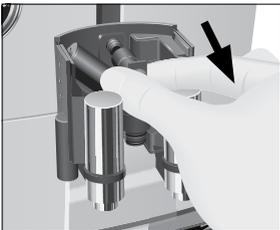


- ▶ Remove the air intake pipe.

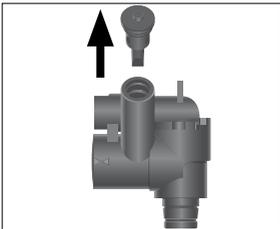


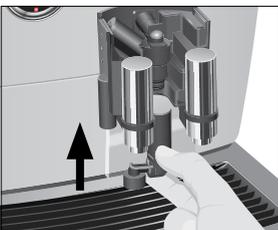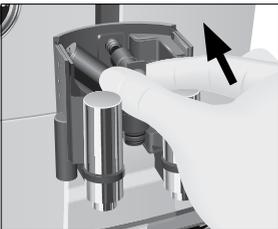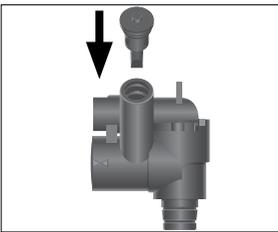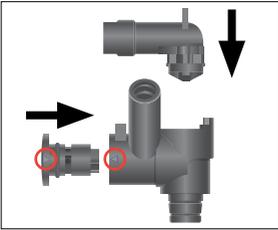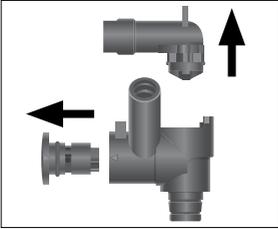

- ▶ Dismantle the milk system into its individual parts.
- ▶ Rinse all the parts under running water. If there are severely dried-on milk residues, firstly immerse the individual parts in JURA Cappuccino Cleaner and then rinse them thoroughly.
- ▶ Reassemble the milk system. When doing this, note the arrows (circled in red in the picture) on the individual parts.
- ▶ Fit the air intake pipe.
- ▶ Fit the assembled individual parts back in the dual spout and press it firmly.
- ▶ Attach the bottom part of the milk system to the part already inserted from below.

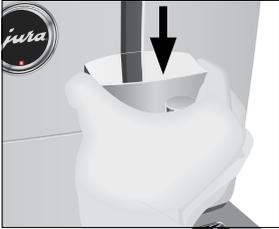

- ▶ Fit the cover of the dual spout. It will click into place audibly.

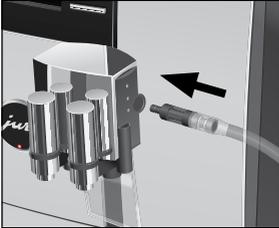

- ▶ Insert the milk pipe into the dual spout.

Inserting and activating the filter

Your GIGA no longer has to be descaled if you are using the CLARIS Blue filter cartridge. If the water hardness is 10° dH or more, we recommend using the filter cartridge.

If you did not activate the filter cartridge the first time you used the machine, you can do this now as follows.

- i** Perform the ‘inserting the filter’ operation without any interruptions. This will ensure that your GIGA always produces its best.

Precondition: ‘Please select product:’ is displayed.

- P** ▶ Press the P button.
‘Maintenance status (1/5)’
-  ▶ Turn the Rotary Switch until the programme item ‘Machine settings (3/5)’ is displayed.
 - ▶ Press the ‘Maintenance settings’ button.
 - ▶ Press the ‘Filter’ button.
‘Filter’
 - ▶ Press the ‘Active’ button.
 - ▶ Press the ‘Save’ button.
‘Saved’ appears briefly on the display.
‘Insert filter.’ / ‘Press the Rotary Switch.’
- ▶ Remove the filter cartridge extension from the Welcome Pack.



- ▶ Fit the filter extension on top of a CLARIS Blue filter cartridge.
 - ▶ Remove and empty the water tank.
 - ▶ Open the filter holder and insert the filter cartridge into the water tank, exerting slight pressure.
 - ▶ Close the filter holder. It will click into place audibly.
 - ▶ Fill the water tank with fresh, cold water and reinsert the tank.
 - ▶ Press the Rotary Switch.
- Filter is being rinsed.**, the filter is rinsed. Rinsing of the filter stops automatically. **Empty drip tray.** appears on the display.
- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.
- Filter** / **Filter rinsing complete.**
- The machine heats up. **Please select product.** appears on the display. Your GIGA is once more ready for use.

Changing the filter

- i** After 50 litres of water have flowed through or after two months, the filter will cease to work. Your GIGA will automatically prompt you to change the filter.
- i** If the CLARIS Blue filter cartridge is not activated in programming mode, you will not be prompted to change the filter.

Example: Proceed as follows to change the filter when prompted to do so.

Precondition: **Change the filter** and the ☼ symbol are displayed.

- P**
- ▶ Press the P button.
- Maintenance status (1/5)**
- ▶ Press the **Change the filter** button.
 - ▶ Press the **Start** button.
 - ▶ Press the **Start** button again.
- Change filter.** / **Press the Rotary Switch.**
- ▶ Remove and empty the water tank.
 - ▶ Open the filter holder and remove the old CLARIS Blue filter cartridge and filter extension.
 - ▶ Fit the filter extension on top of a new filter cartridge.



- ▶ Insert the filter cartridge into the water tank, exerting slight pressure.
- ▶ Close the filter holder. It will click into place audibly.
- ▶ Fill the water tank with fresh, cold water and reinsert the tank.
- ▶ Press the Rotary Switch.
'Filter is being rinsed.', the filter is rinsed. Rinsing of the filter stops automatically. 'Empty drip tray.' appears on the display.
- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.
'Change the filter' / 'Filter rinsing complete.'
The machine heats up. 'Please select product:' appears on the display.

Cleaning the machine

After 220 preparations or 80 switch-on rinses, the GIGA will prompt you to clean it.

CAUTION

If the wrong cleaning agent is used, the machine could be damaged and/or traces could be left behind in the water.

- ▶ Use only original JURA maintenance products.

- i** The cleaning programme lasts approximately 20 minutes.
- i** Do not interrupt the cleaning programme. The quality of cleaning will be impaired if you do so.
- i** JURA cleaning tablets are available from specialised dealers.

Example: Proceed as follows to clean when prompted to do so.

Precondition: 'Clean machine.' and the ☼ symbol are displayed.

- P**
- ▶ Press the P button.
'Maintenance status (1/5)'
 - ▶ Press the 'Clean' button.
 - ▶ Press the 'Start' button.
 - ▶ Press the 'Start' button again.
'Empty coffee grounds container.'
 - ▶ Empty the drip tray and coffee grounds container and put them back into the machine.
'Press the Rotary Switch.'



- ▶ Place a receptacle under the dual spout.
 - ⌚ ▶ Press the Rotary Switch.
'Machine is being cleaned.', water flows out of the dual spout. The operation is interrupted, 'Add cleaning tablet.'
 - ▶ Open the cover of the filler funnel for ground coffee.
 - ▶ Insert a JURA cleaning tablet into the filler funnel.
 - ▶ Close the cover of the filler funnel.
'Press the Rotary Switch.'
 - ⌚ ▶ Press the Rotary Switch.
'Machine is being cleaned.', water flows out of the dual spout repeatedly. The operation is interrupted, 'Empty coffee grounds container.'
 - ▶ Empty the drip tray and coffee grounds container and put them back into the machine.
'Clean' / 'Cleaning complete.'
- Cleaning is now complete. Your GIGA is once more ready for use.

Descaling the machine

The GIGA builds up deposits of limescale over time and automatically prompts you to descale it when necessary. The degree of calcification depends on the hardness of your water.

-
- ⚠ CAUTION** If the descaling agent comes into contact with the skin or eyes, this can cause irritation.
- ▶ Avoid contact with the skin or eyes.
 - ▶ Rinse off the descaling agent with clean water. Should you get any descaling agent in your eye, see a doctor.
-
- CAUTION** If the wrong descaling agent is used, the machine could be damaged and/or traces could be left behind in the water.
- ▶ Use only original JURA maintenance products.
-
- CAUTION** If the descaling operation is interrupted, there may be damage to the machine.
- ▶ Allow the descaling programme to run to the end.
-

CAUTION

If the descaling agent comes into contact with sensitive surfaces (e.g. marble), damage cannot be ruled out.

- ▶ Clean up any splashes immediately.

- i** The descaling programme lasts approximately 45 minutes.
- i** JURA descaling tablets are available from specialised dealers.
- i** If you use a CLARIS Blue filter cartridge and this is activated, you will not be prompted to descale.

Example: Proceed as follows to perform descaling when prompted to do so.

Precondition: ‘Decalcify machine.’ and the  symbol are displayed.

P

- ▶ Press the P button.

‘Maintenance status (1/5)’

- ▶ Press the ‘Descal’ button.
- ▶ Press the ‘Start’ button.
- ▶ Press the ‘Start’ button again.

‘Empty drip tray.’

- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.

‘Pour descaling agent into water tank.’

- ▶ Remove and empty the water tank.
- ▶ Completely dissolve the contents of one blister (3 JURA descaling tablets) in a receptacle holding 600 ml of water. This may take several minutes.
- ▶ Pour the solution into the empty water tank and insert it into the machine.

‘Press the Rotary Switch.’

- ▶ Place one receptacle under the dual spout and another under the hot-water spout.




- ▶ Press the Rotary Switch.

‘Machine is being descaled.’, water flows repeatedly out of the dual spout and the hot-water spout.

The operation stops automatically. ‘Empty drip tray.’ appears on the display.

- ▶ Empty both receptacles.

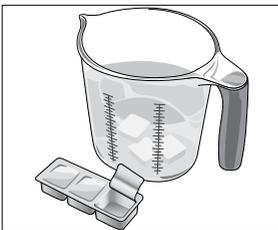



- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.
‘Fill water tank.’
 - ▶ Remove the water tank and rinse it thoroughly.
 - ▶ Fill the water tank with fresh, cold water and reinsert the tank.
‘Press the Rotary Switch.’
 - ▶ Place the receptacles back under the dual spout and the hot-water spout.
 - ▶ Press the Rotary Switch.
‘Machine is being descaled.’, water flows out of the dual spout and the hot-water spout.
The operation stops automatically. **‘Empty drip tray.’** appears on the display.
 - ▶ Empty the drip tray and coffee grounds container and put them back into the machine.
‘Descale’ / ‘Descaling complete.’
Descaling is now complete. Your GIGA is once more ready for use.
- i** If the descaling operation stops unexpectedly, rinse the water tank thoroughly.